

	Type <b>Guideline</b>	Project/Product <b>CANopen Win API</b>	
	Name <b>CANopen Win API – Getting Started Guide</b>	Project Code <b>CANOPEN WIN API</b>	
Author <b>HL</b>	Department <b>R&amp;D</b>	Date <b>2016-12-12</b>	
Checked	File Name <b>CANopen Win API - Getting Started Guide.odt</b>	Printed	
Approved	Revision <b>\$Rev: \$</b>	Classification <b>PUBLIC</b>	Page <b>1 (1)</b>
Copyright © TK Engineering Oy. All rights reserved. Reproduction, use or disclosure to third parties without express authority is strictly forbidden.			

Follow this guide to quickly start using CANopen Win API.

## Install CANopen Win API(CANopen DLL)

After you have downloaded the installation package from our website, you need to following below procedures to install the program.

- Double click **CANopen-Win-API-setup-X.X.X.exe** to install the program.
- You need to be an administrator to finish the installation process.
- After the installation is finished, in Windows Start menu, there will be a CANopen Win API folder which contains the short cuts of the API documentation, program folder and the sample folder.
- Send the serial number, EAN number and device name of your CAN hardware to us via [info@tke.fi](mailto:info@tke.fi) and we will generate a demo string license for you. Read the API documentation for how to use the string demo license.
- For purchasing full license, please contact us via [info@tke.fi](mailto:info@tke.fi).

## Uninstall CANopen Win API(CANopen DLL)

Please go to Control Panel→ Programs→ Uninstall a program and uninstall CANopen Win API.